



Adjustment of Interior Light Brightness

This procedure needs to be considered carefully as damage may result from misuse of this feature. As delivered, the light brightness is adjusted to be typical of that of oil lanterns, but it may be adjusted to be dimmer or brighter. If you decide to proceed, follow this procedure: remove the roof panel as described on the main instruction sheet, be sure to disconnect the electrical 'pigtail' that connects the roof to the carbody. By sliding the small lavatory window upward you can gain access to the adjusting 'POT' (pictured above) on the lighting circuit board. Using a small screwdriver, turning the adjuster counter-clockwise will dim the lights and clockwise will brighten the lights. Keep in mind that the brighter the lights are, the shorter the bulb life. It is advised that you try very small adjustments (1/12th of a turn) to reach your final setting. **If you brighten the lights too much they will fail in short order and this is not covered by your owner warranty.**